





## In the package

---

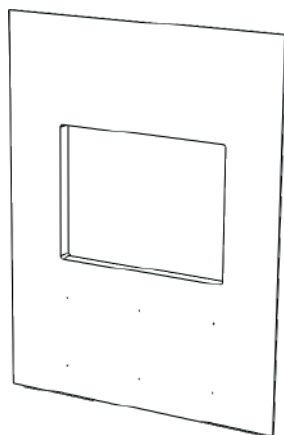

Front board (1 pcs)

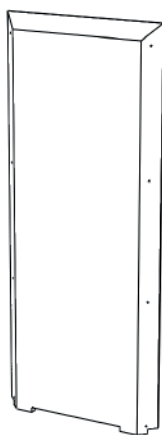


Side board (2 pcs)




Left top board (1 pcs)




Right top board (1 pcs)

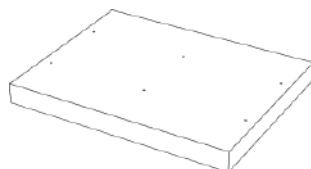


Stove shelf (1 pcs)

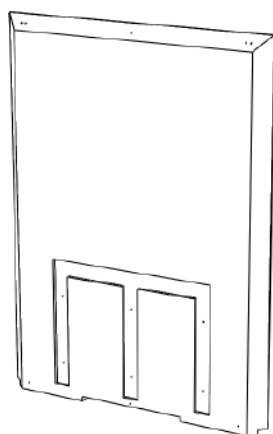

Back board (1 pcs)

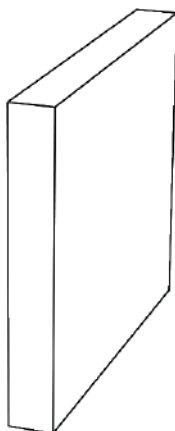

Internal reinforcement (3 pcs)

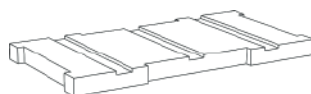


Bottom plate (1 pcs)



Temporary plug 4 + 1 pcs

## In the package

---

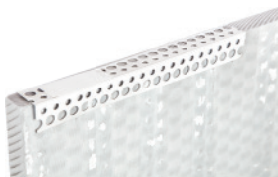

Skamol Corner (3 pcs)



Skamol Glue (1 bag)



Skamol Screw (50 pcs)



Skamol Primer (3 L)



Skamol Smooth Plaster (15 kg)  
or  
Skamol Structural Plaster (20 kg)



Skamol Mesh (1 roll)

## Tools needed

---



Power drill



Whisk



Bits Torx T20



Plastic bucket



Brick trowel




Plaster trowel


# Assembly instructions

---

1. Begin with screwing the bottom and back board together.

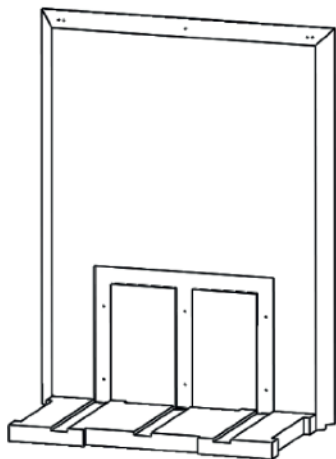


2. Place the three reinforcements.

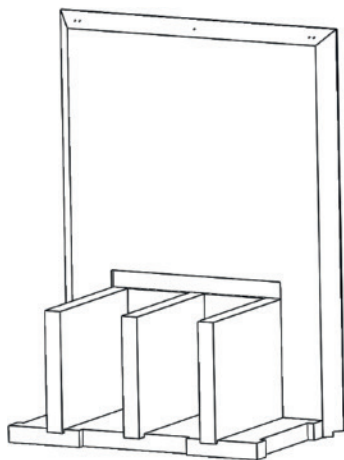

# Assembly instructions


---

3. Place the stove shelf.

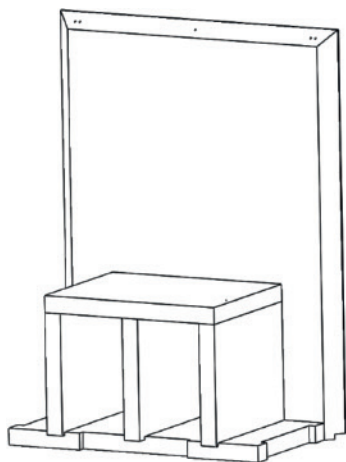

4. Now place the enclosure on the exact spot.


5. Place the side boards.

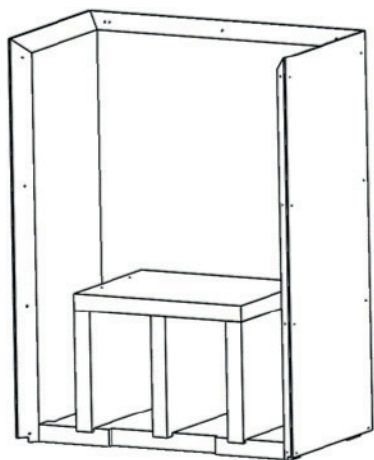


## Assembly instructions

---

6. Place the front board.

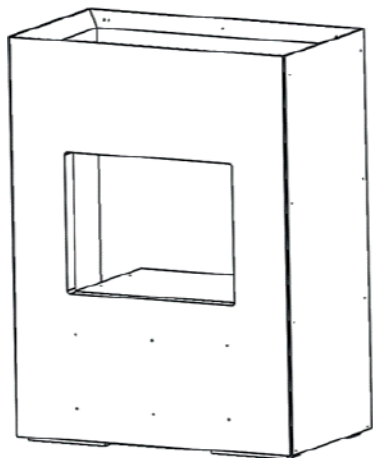


7. Place the insert.

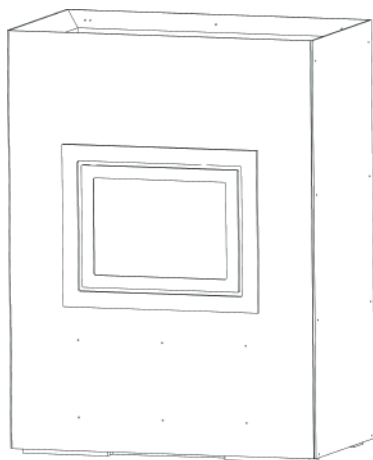


## Assembly instructions

---


8. Connect the chimney.

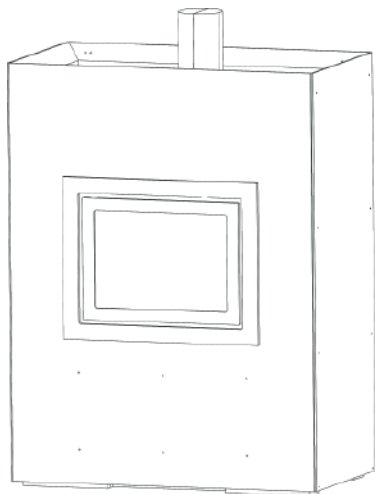


9. Place the left top board.

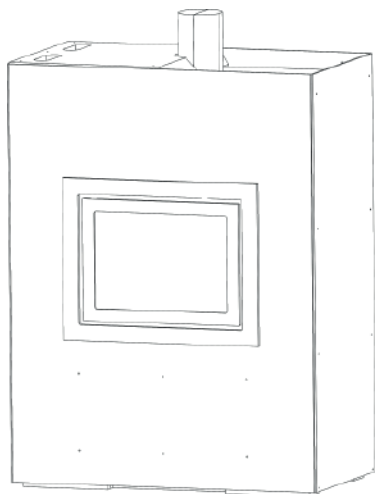

10. Place the right side board.

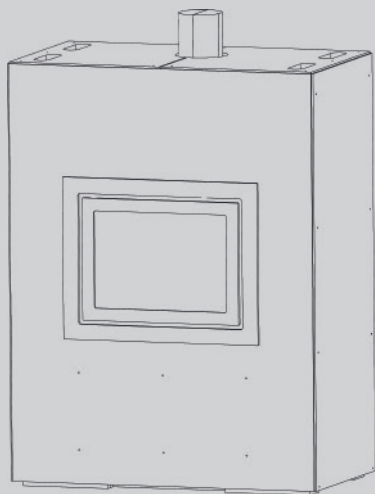

11. Place the temporary plugs. These are only used when plastering.

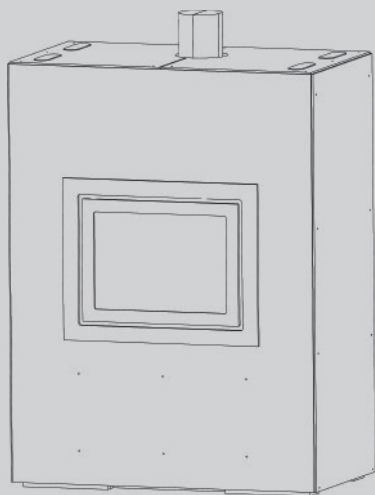

**Skamol by Etex**

Hasselager Centervej 1, 8260 Viby, Denmark

Tel.: +45 97 72 15 33

[www.skamol.com](http://www.skamol.com)

  
**skamol**  
by etex